




- 1) Loosen filter bowl and drain.
- 2) Ensure valve is open.
- 3) Loosen hose nut and drain.




- 4) Remove cap to drain valve.
- 5) Loosen hose nut and drain.

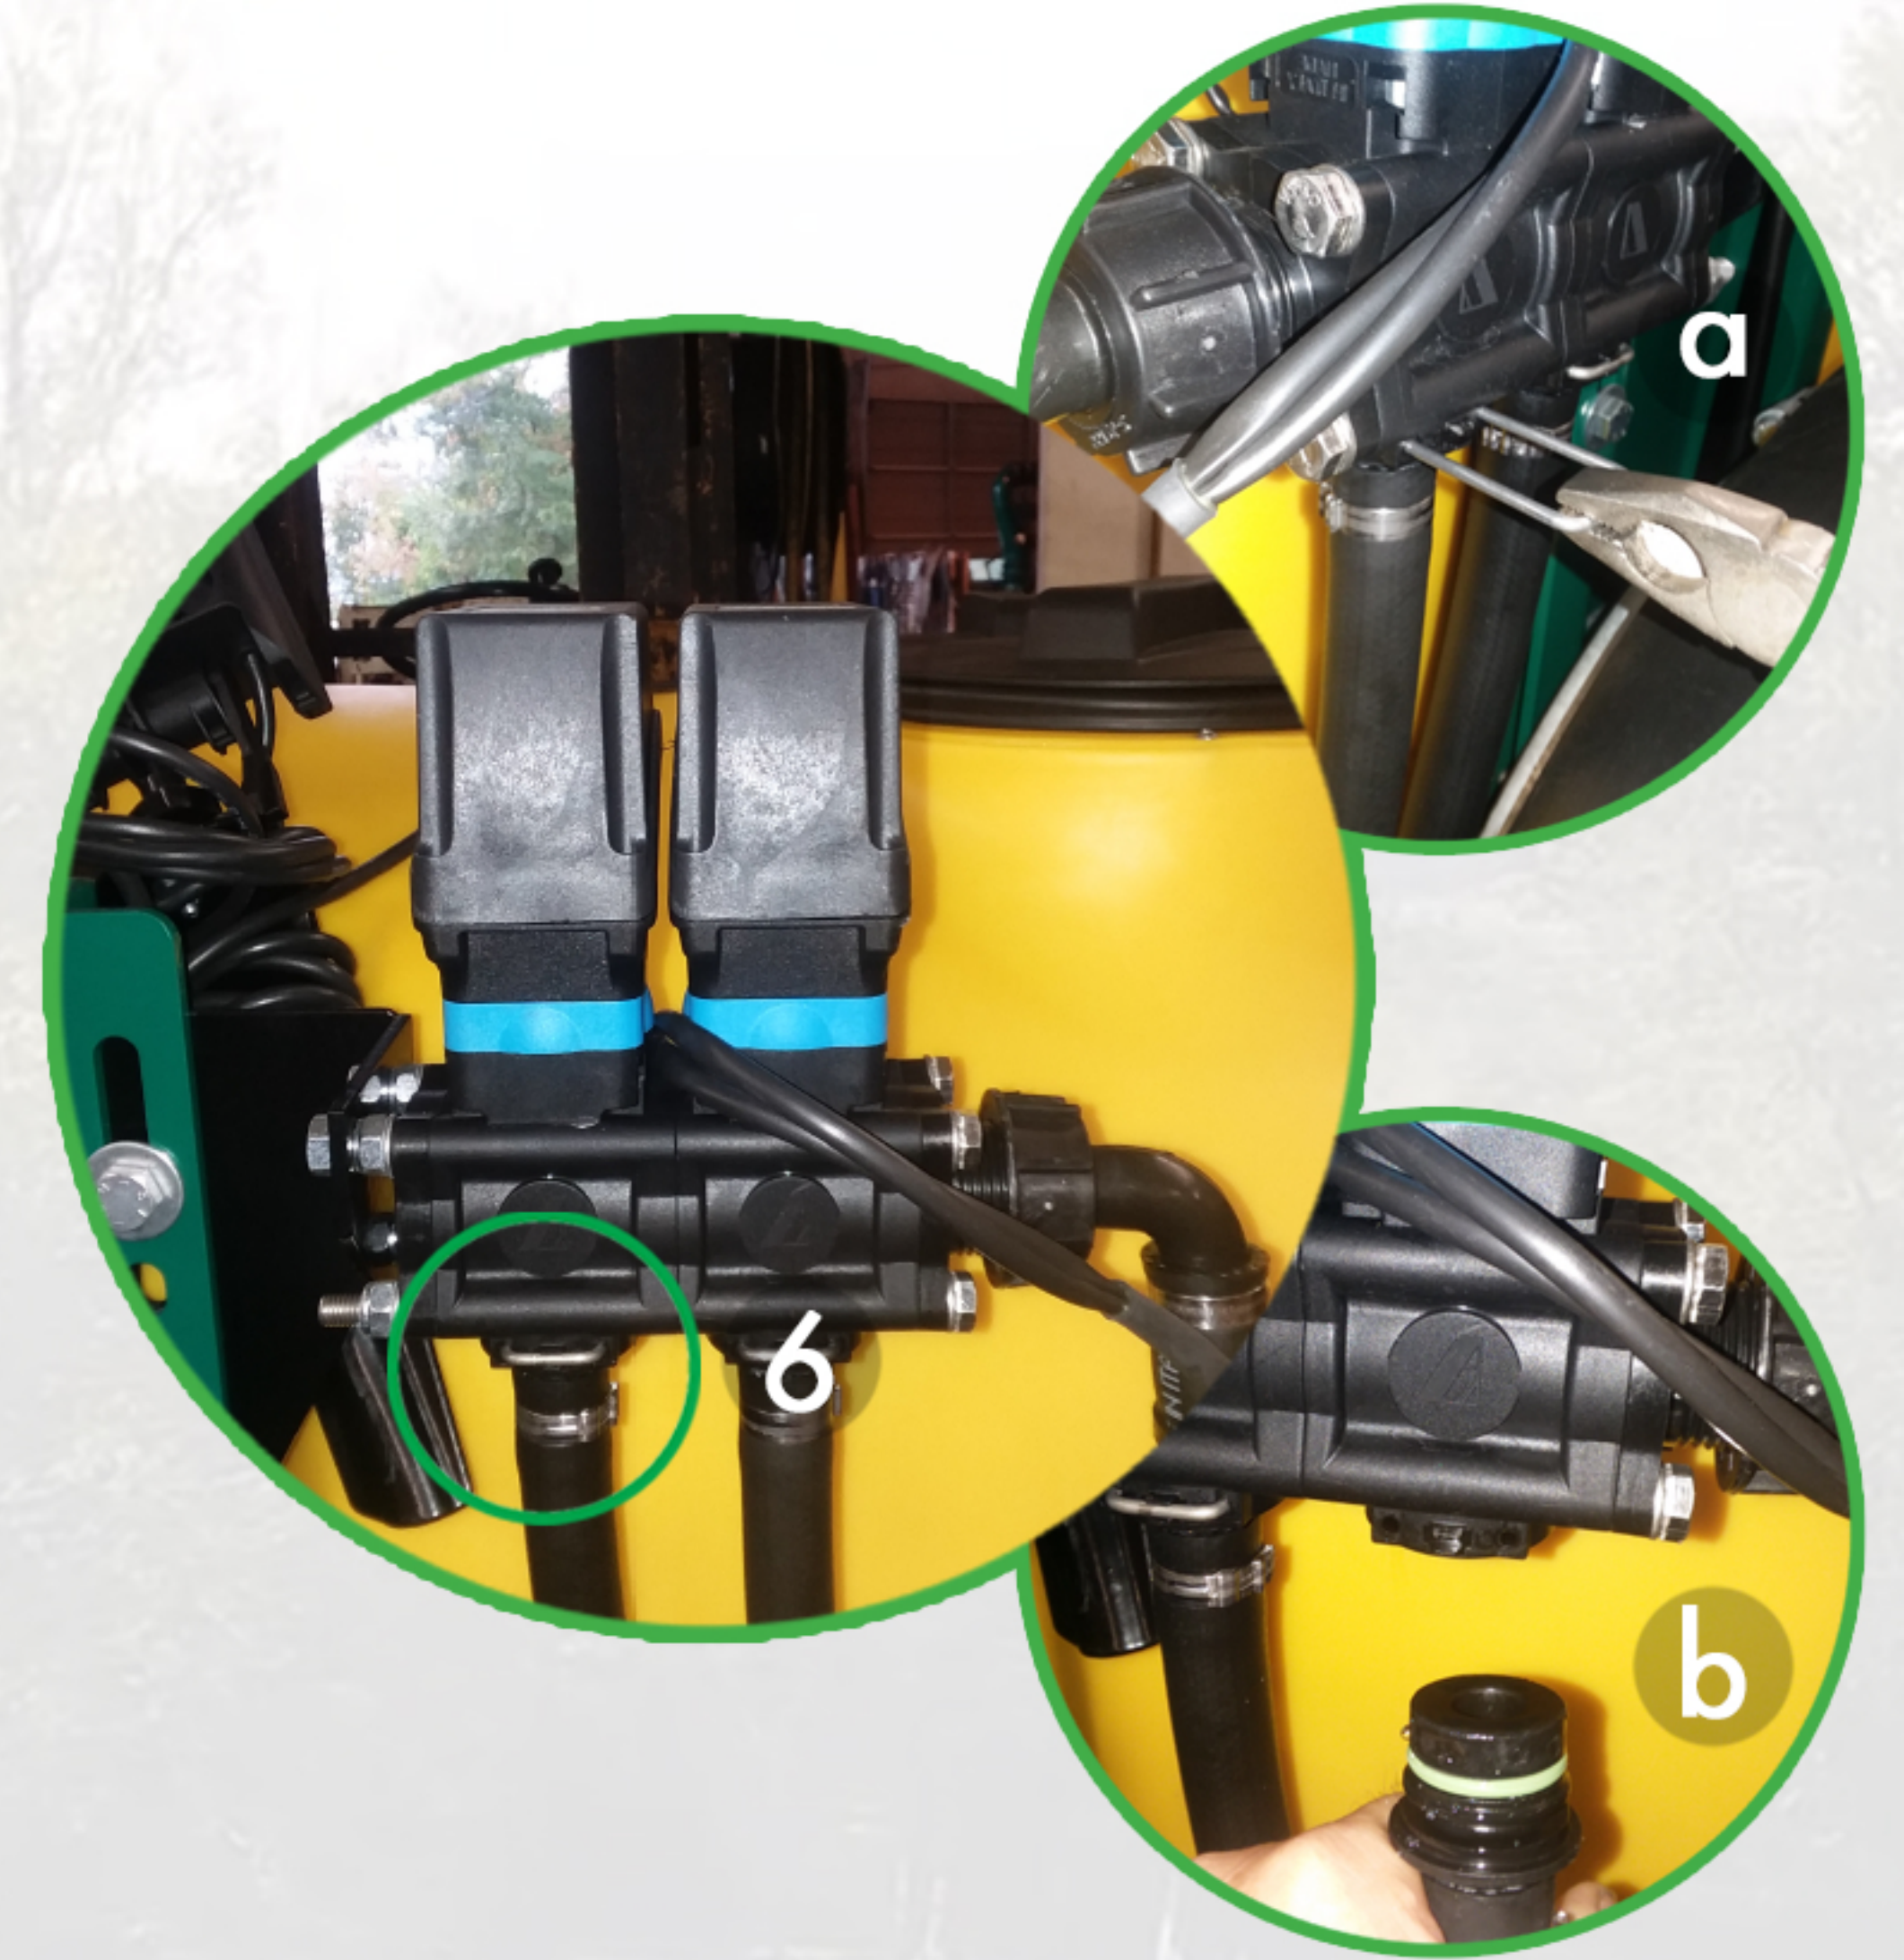

- 6) a. Pull "U" Pin
- b. Remove hose and drain



- 7) Remove cap to drain.
- 8) Ensure valve is in drain position.

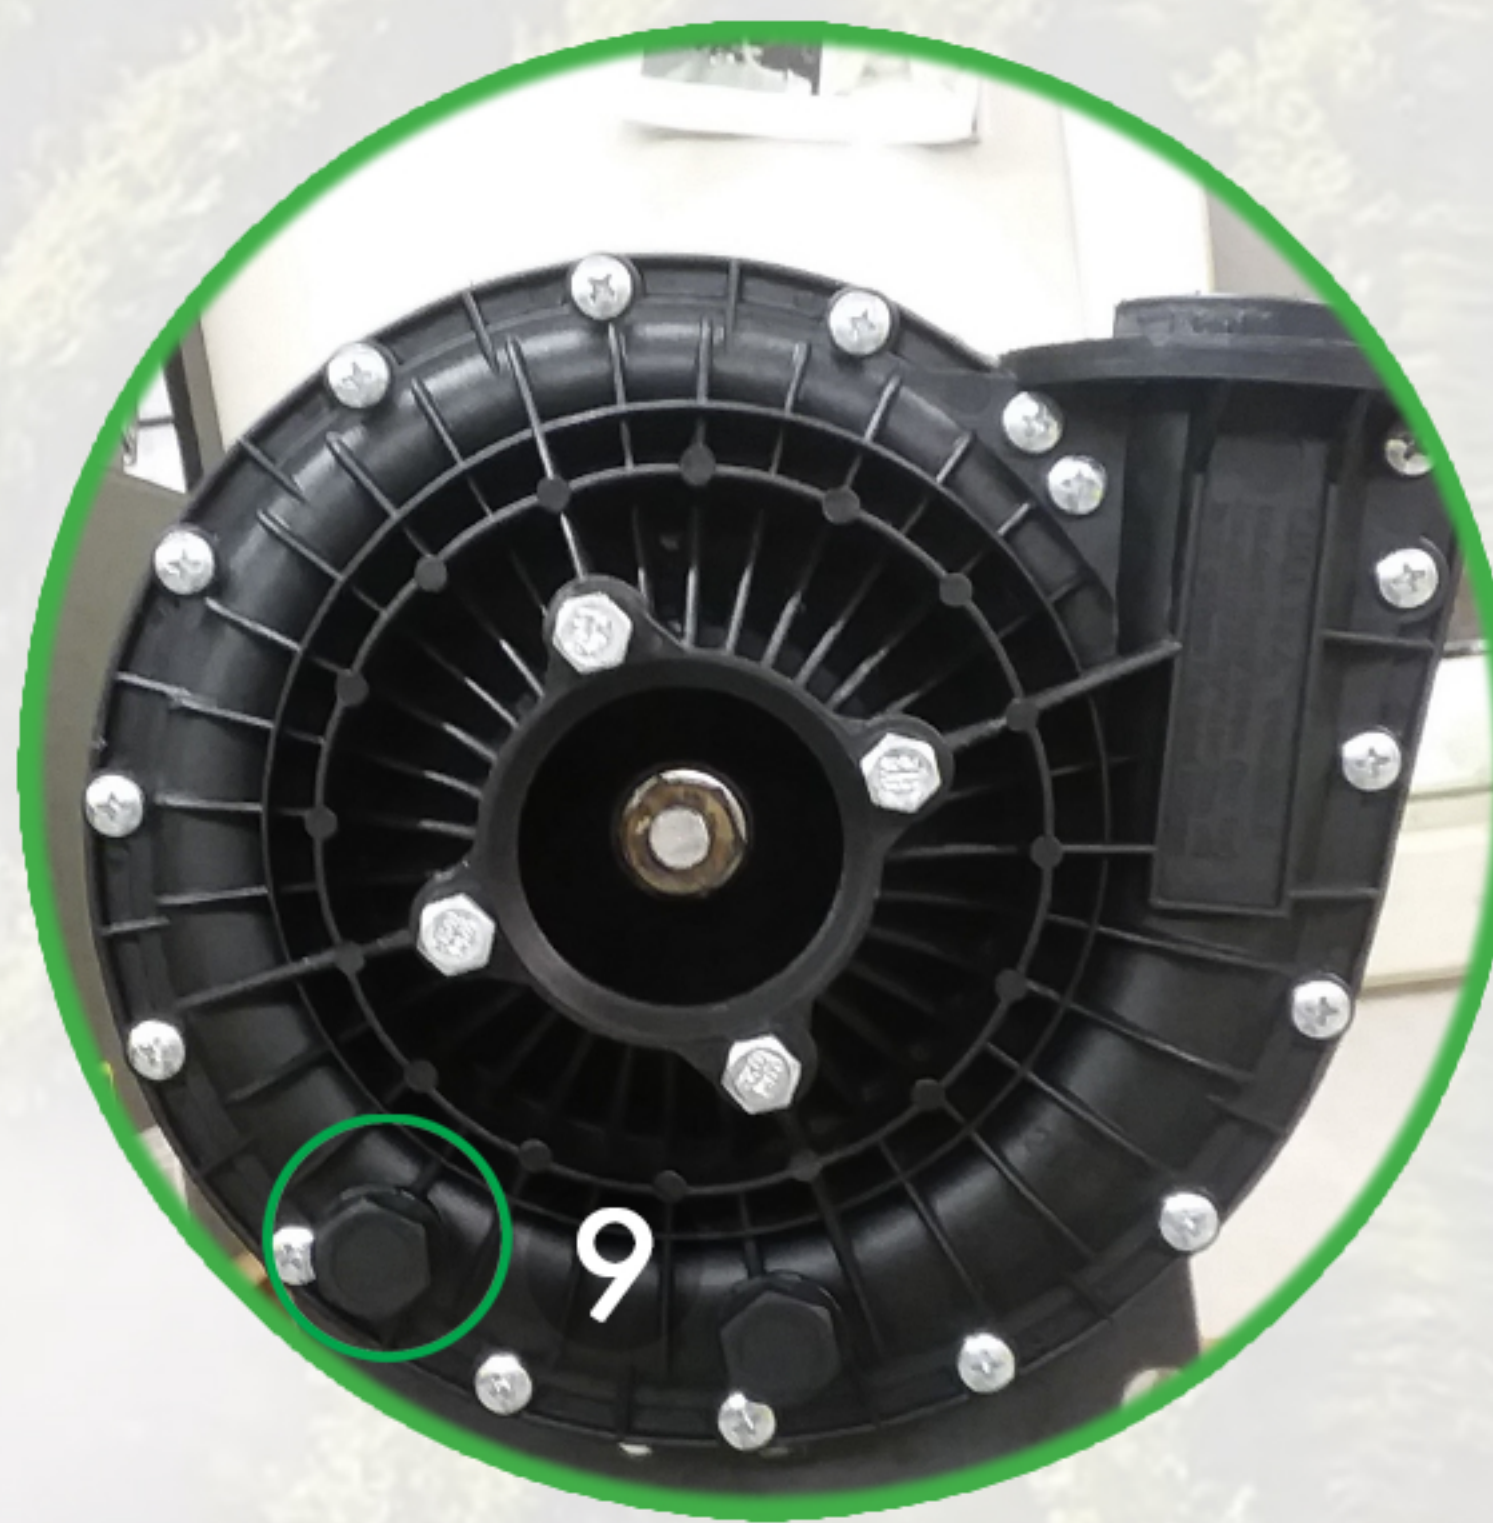

- 9) Remove drain plug.



- 10) Remove hose and drain manifolds.

